

# Sno-Cone Machine Instructions

## Safety Precautions

- The Sno-Cone Machine can take ice cubes or blocks of ice broken into pieces approximately 3" - 4" in size. The ice will not fit in the shaver if the pieces are too large.
- The design of the shaving chute automatically draws the ice against the blade. There is no need for manual effort.
- Only plug rented snow cone machine into a grounded outlet of appropriate volts and amps.
- Keep fingers and hands away from shaving unit of rented snow cone machine when motor is running.
- Insert only ice into the rented snow cone machine's ice-crushing compartment.

## Setup

- Place the rented snow cone machine on a stable, level surface, such as a table or counter.
- Make sure to set up the snow cone machine near a grounded, electrical source so that you will not need to use an extension cord, unless approved by the machine's manufacturer.

## Operation

1. Set the cabinet on the drip tray. Make sure to put the drain hole over a bucket or other area that can accept any draining liquid from the machine. Melted ice and condensation go into the drip tray.
2. Plug in and turn on the snow cone machine.
3. Lift the snow cone machine's handle and fill the shaver body, also known as the gooseneck or hopper, about an inch from its top with 3- to 4-inch ice cubes.
4. Push the pusher handle down against the ice in the chute. Apply firm and even pressure to make the best snow (too much pressure will result in snow that is coarse; too little pressure will make the snow mushy).
5. Scoop ice into the snow cone container and pump an amount of flavored syrup correct for the container's size onto the ice.
6. When finished using the rented snow cone machine, turn off switches.

## Cleaning

1. Wipe all water and any syrup off of the outside of the cabinet. Do not wash or immerse in water.
2. Clean the dip pan, ladle, ice scoop, and all syrup bottles. Make sure any rented syrup bottles and pumps come back clean.